 
 



## OPERATING A CONTACT SAFETY TOOL



1. The operator requires finger to be off the trigger and the nose of the tool to be placed on the work piece.



 
2. The contact safety mechanism is then depressed against the work piece and the trigger is pulled to drive a fastener.




3. The trigger is released after each fastener is driven.

4. Move the tool to the next location and the above procedure repeated.


## Filling The Magazine

 

 1. Disconnect air hose.



 2. Depress the magazine latch. Pull back on the magazine cover.



3. Insert a stick of fasteners into the magazine. Make sure the pointed ends of the fasteners are resting on the bottom edge of the magazine.

Item Number	460A Part Number	Description	Item Number	460A Part Number	Description
101	820384	DEFLECTOR BOLT	301		GUN BODY UNIT
102	840156	DEFLECTOR	302	920540	O - RING
103	820045	RUBBER PAD	303	810922	END CAP
104	830591	HEX.SOC.HD.BOLT	304	920320	AIR PLUG
105	840157	CAP	305	920637	DUSTY COVER
106*	840158	CYLINDER CAP SEAL	401	820667	HEX.SOC.HD.BOLT
108*	840159	SEAL	402	840170	DRIVER GUIDE COVER B
109*	840160	COMPRESSION SPRING	403	840171	DRIVER GUIDE
110*	840161	O - RING	404	820645	HEX.SOC.HD.BOLT
111*	840162	O - RING	405	840172	DRIVER GUIDE COVER A
112	840163	HD.VALVE PISTON	406	840173	HEX.SOC.HD.BOLT
113*	920815	O-RING	407	840174	MAGAZINE A
114*	840164	DRIVER UNIT	408	840175	FLAT BAR
115*	920812	COLLAR	409	840176	MAGAZINE B
116	840165	CYLINDER	410	840177	PUSHER
117	920817	O - RING	411	840178	SHAFT
118	920820	CYLINDER SPACER	413	840179	PUSHER SPRING
119	920821	O - RING	414	830549	SPRING PIN
120*	840166	BUMPER	415	840180	REAR PLATE
121	840167	DRIVER GUIDE	416	840181	PROTECTING HOOD COVER
122	920813	PRESS RING	417	840182	GASKET
123	920882	CYLINDER PRESS RING	418	840183	BOLT ASSY
124	920819	CYLINDER RING	419	840184	BOLT ASSY
201	920519	O - RING	420	920942	HEX.SOC.HD.BOLT
202	920521	O - RING	421	840185	BRACKET
203	920520	PLUNGER CAP	422	920648	HEX.SOC.HD.BOLT
204	840168	VALVE PLUNGER	423	840186	SPRING
205	920522	O - RING	424	830977	LATCH
206	920524	O - RING	425	840187	LATCH PIN
207	830902	SPRING	426	920655	E - RING
208	920823	PLUNGER	427	920660	HEX.SOC.HD.BOLT
209	830623	O - RING	428	920572	FLAT WASHER
210	920528	TRIGGER VALVE HEAD	429	920573	BOLT CAP
211	920529	SPRING PIN	430	840188	SAFETY GUIDE
212	920678	SPRING PIN	431	810806	SAFETY SPRING
213	920176	SPRING PIN	432	840189	SAFETY
214	810104	TRIGGER UNIT	433	920327	FLAT WASHER
215	810414	TRIGGER PIVOT PIN			
216	920627	URETHANE RETAINER			